

## Operating Instructions

### TSE Basic



Made in Germany  
[www.burg-waechter.de](http://www.burg-waechter.de)

### SecuTronic Basic



## Key:

						
Key function control	Code input correct	Code input incorrect	Manipulation block (5 min thereafter 20 min)	Please replace batteries	Program mode	Maintenance required ( see technical data )

## Opening the safe:



Code input incorrect.



Press « ON » and enter correct code.

# Changing Codes:

## Important

Enter code changes only with door open !

Do not enter personal data (e.g. birth date, telephone no.)

Step 1



Step 2



Step 3



Step 4



Step 5




Step 6



Step 7



Step 8

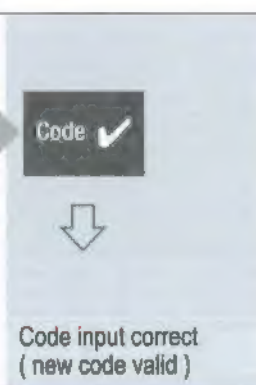

Step 9



EA-TSE Basic / SecuTronic Basic - NM 10/03

**BURG  
WÄCHTER**

**BURG-WÄCHTER KG**

Altenhofer Weg 15  
D-58300 Wetter  
Germany

[www.burg-waechter.de](http://www.burg-waechter.de)  
[info@burg-waechter.de](mailto:info@burg-waechter.de)

## Technical Information:

### Technical data

SecuTronic 8 Basic:  
Electronic lock as per EN 1300 Class: B  
Combination lock with 1.000.000 real possibilities.

6-digit code

Manipulation block

(block active if wrong code entered 3 times):

TSE 3000 Basic: 1 min., thereafter 3 min.

SecuTronic Basic: 5 min., thereafter 20 min.

Power supply:

TSE 3000 Basic: 3 MIGNON batteries, LR6, AA, alkaline

SecuTronic Basic: 3 MICRO batteries, UR03, AAA, alkaline

Maintenance required:

The system has established maintenance requirement.

Please contact your local dealer.

Optimal environmental conditions:

+15°C / +40°C / up to 95% relative humidity  
(no condensation)

Permitted temperature range: -20°C / +50°C

When installed on external doors, the TSE 3000 Basic should be  
protected from constant exposure to the elements (e.g. by a canopy).

Typographical errors, omissions and changes reserved.

## Changing Batteries:

### Battery replacement



Dispose batteries in an environmentally safe manner.

### SecuTronic Basic

